



540 North Commercial St.
Manchester, NH 03101

www.jetboil.com
Tel: (603) 518-1600
Fax: (603) 518-1619

Enclosed please find the replacement igniter, and below are instructions for replacing it. Please contact us if we can be of further assistance.

Regards,

customerservice@Jetboil.com
Customer Service
Jetboil Inc.

CAUTION! Do not attempt this while the Jetboil burner is hot. The burner will remain hot even after the cup cools. Allow the Jetboil burner to cool before beginning.


- 1) Grip the burner head (the disk that flames come out of), and turn it counterclockwise until it, and the metallic base plate it's attached to, come loose.
- 2) Now comes the fun part: now that the burner is unscrewed from the valve, you'll need to rotate and twist the burner and base plate to clear the igniter. Bend the igniter if you need to- you're replacing it!
- 3) Once you've separated the burner and base plate from the igniter, pull straight up on the igniter to release it from its clips.
- 4) Insert the new igniter (which may look different from your old igniter) and press until it "snaps" in place.
- 5) Doing the reverse of step (2), we need to get the burner and base-plate back into position, with the igniter popping up through the hexagonal hole in the base-plate.
- 6) Press the igniter button a few times- you should see a spark. If not, you might need to bend the silver igniter wire. Its tip should be approximately 1/4" away from the burner head, or perhaps a bit closer.
- 7) Make a cup of coffee or some soup, and enjoy!




1A



1B

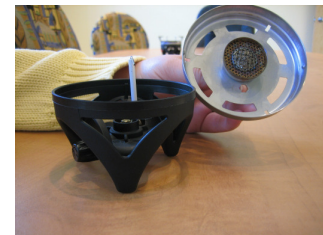

2A

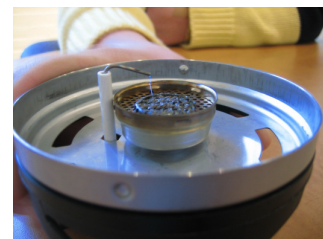

6A



6B